




## Quickstartguide for iDTRONIC UHF RFID Readers

(R-DT-EVO-UHF and R-STICK-EVO-UHF)


### Installation UHF-Version

Please refer to this installation guide to start both software and reader successfully.

1. Download the appropriate software from: <https://www.idtronic-rfid.com/support/sdks>
2. Unpack the zip folder to a folder of your choice.
3. Open the folder “**Card Reader UHF SDK**” or “**Embedded UHF SDK\_R830**” and then open the folder “**06\_Demo Software**”.
4. Start the file “**iDTRONIC - Reader Demo Tool Setup 1.61.33d.exe**” (or newer version) and follow the installation procedure.
5. Connect the reader to USB-Port of your computer.
6. Check in the Windows Device Manager if the driver for the USB-Port is installed. If it is not installed, then click on this driverless port and select update driver-software, please use the driver from the folder “**04\_USB-Drivers**”.

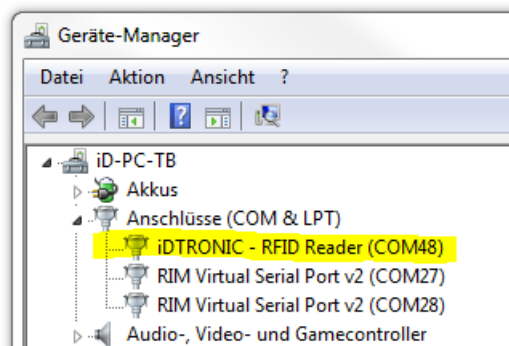

7. After successful installation, start the software at menu item “**iDTRONIC - Reader Demo Tool**” in programs.
8. Open the dropdown menu “**Reader**” and select add, and then select your Reader.

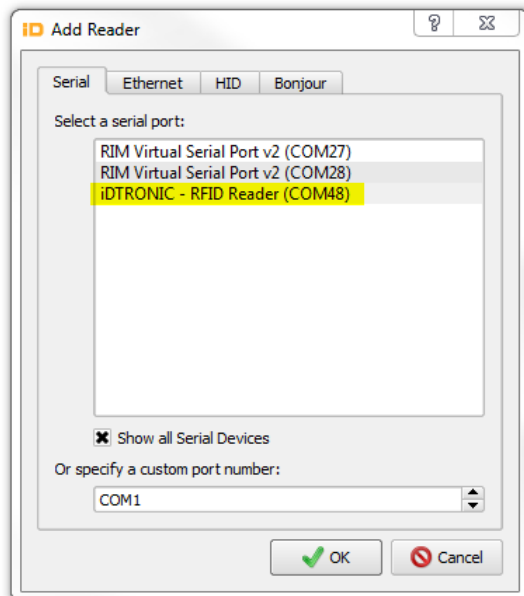


9. Now you can proceed to read and write tags.

**Important Note :** If your stick is not displayed in the software after connecting, please look in the device manager. If the device is recognized as HID device, if this is the case and you want to control the Reader with the software please contact us , because you either ordered the wrong product or something went wrong before shipping.

## Downloads and support



<https://tinyurl.com/y2olkcyp>

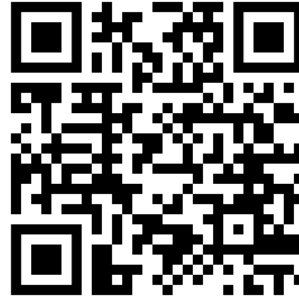

<mailto:support@idtronic.zendesk.com>